

Schakelaar	Stuurkast
C1	1
A	2
B	3
C	4
D	5
E	6
F	7
C2	8
1	9
2	10
3	11
4	12
5	13
6	14